



**TIBALDI**

1916

INSTRUCTION MANUAL



**TIBALDI**

1916

**INSTRUCTION MANUAL – G0404  
CHRONOGRAPH MOVEMENT**

---

# WATCH DISPLAY & TIME SETTING

Describe:Stainless Steel Case And Bezel Plating In Ip Gold,Mineral Glass,  
Ip Gold Crown, Black Dial Applied With Gold Roman Indexes , Black  
Leather Strap, 6 Hands, Ronda 3540.D Mov't, 5Atm

## Display elements

Minute hand

Second counter

$\frac{1}{10}$  second counter  
(hour counter after 30 minutes)

Minute counter

Hour hand

Second hand


Date

## Control buttons


Push-button A

Crown

Push-button B

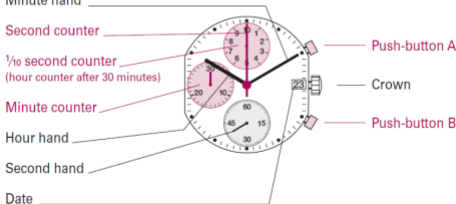


## SETTING THE TIME

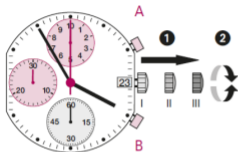

❶ Pull out the crown to position III (the watch stops).

❷ Turn the crown until you reach the correct time 8:45.

❸ Push the crown back into position I.

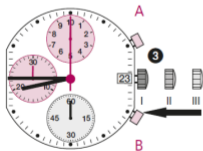

Please note:


\* In order to set the time to the exact second, ❶ must be pulled out when the second hand is in position «60».

Once the hour and minute hands have been


set, ❸ must be pushed back into position I at the exact second.



## SETTING THE DATE Quick Mode

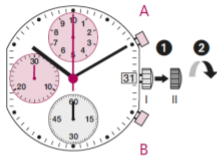

- 1 Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown anticlockwise until the correct date 1 appears.
- 3 Push the crown back into position I.

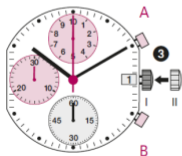


Please note:

During the date changing phase between approx. 08.30 PM and 12 PM; the date must be set to the date of the following day.



## SETTING THE DATE/TIME

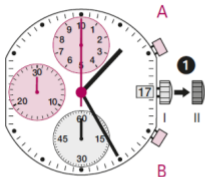



Example:

- Date / time on the watch: 17 / 1:25 AM
- Present date / time: 4 / 8:30 PM

❶ Pull out the crown to position II (the watch continues to run).

❷ Turn the crown anticlockwise until yesterday's date appears 3 .

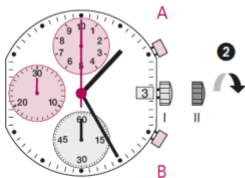

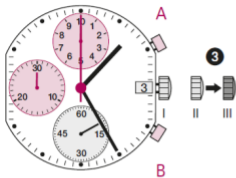


③ \* Pull out the crown to position III (the watch stops).

④ Turn the crown until the correct date 4 appears.

⑤ \*\* Continue to turn the crown until the correct time 8:30 PM appears.

⑥ Push the crown back into position I.

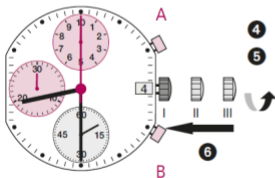


Please note:

\* To set your watch to the exact second, please refer to the chapter entitled «setting the time».

\*\* Please observe the AM/PM clock rhythm.




## CHRONOGRAPH: BASIC FUNCTION (Start / Stop / Reset)

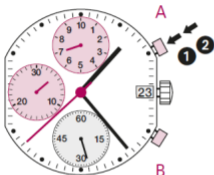


Example:

- 1 Start: Press push-button A.
- 2 Stop: to stop the timing, press push-button A once more and read the chronograph counters:  
4 min / 38 sek / 7/10 sec
- 3 Zero positioning:  
Press push-button B.  
(The chronograph hands will be reset to their zero positions.)

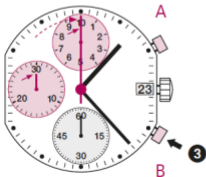



## CHRONOGRAPH: ACCUMULATED TIMING (Start / Stop / Reset)

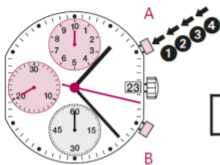

Example:

❶ Start: (start timing)

❷ Stop: (e.g. 15 min 5 sec following ❶)


❸ Restart: (timing is resumed)

❹ \* Stop: (e.g. 5 min 12 sec following ❸)  
= 20 min 17 sec

(The accumulated measured time is shown)

❺ Reset:

The chronograph hands are returned to their zero positions.


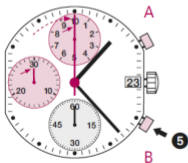


Please note:

\* Following ❹, the accumulation of the timing can be continued by pressing push-button A (Restart / Stop, Restart / Stop, ...).



## CHRONOGRAPH: INTERMEDIATE OR INTERVAL TIMING

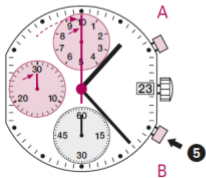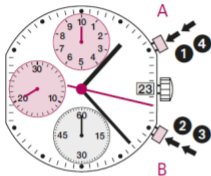

Example:

- 1 Start: (start timing)
- 2 Display interval: e.g. 20 minutes 17 seconds (timing continues in the background)
- 3 Making up the measured time: (the chronograph hands are quickly advanced to the ongoing measured time.)
- 4 Stop: (Final time is displayed)
- 5 Reset:


The chronograph hands are returned to their zero position

Please note:

\* Following 3, further intervals or intermediates can be displayed by pressing push-button B (display interval / make up measured time, ...).




## ADJUSTING THE CHRONOGRAPH HANDS TO ZERO POSITION

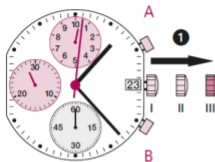

Example:

One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

❶ Pull out the crown to position III (all chronograph hands are in their correct incorrect zero position.)

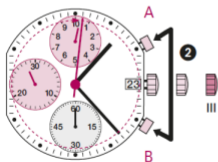

❷ Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand rotates by 360° & corrective mode is activated.)





### Adjusting the second counter hand

Single step ➤ A 1 x short

Continuous ➤ A long



### Adjusting the next hand B



### Adjusting the $\frac{1}{10}$ second counter hand (position 12h)

Single step ➤ A 1 x short

Continuous ➤ A long




### Adjusting the next hand B



### Adjusting the minute counter hand (position 9h)

Single step ➤ A 1 x short

Continuous ➤ A long



Returning the crown to position I  
Termination of the chronograph hands  
adjustment (can be carried out at any  
time).

Battery type: 384 (diameter 7.9 mm x 3.6 mm / SR 41 SW)

Accuracy: +20 / -10 seconds per month






**TIBALDI**

1916

**INSTRUCTION MANUAL – G0404  
QUARTZ MOVEMENT**

# WATCH DISPLAY & TIME SETTING

Describe:stainless Steel Case And Bezel Plating In Ip Gold,Mineral Glass, Ip Gold Crown, Black Dial Applied With Gold Roman Indexes , S/S Metal Band Plating In Ip Gold, 3 Hands, Ronda 715 Mov't, 5Atm

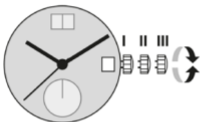

Pos. I Position of rest (watch running)

Pos. II Quick-change correction for date

Blocking time for the quick-change day correction is from approx. 9.30 pm and midnight.

- Pull the crown out to position II (watch still running).
- Turn the crown until the current date appears.
- Push the crown back into position I.

Pos. III Setting the time

- Pull the crown out to position III (watch stopped).
- Turn the crown, until the current time is displayed (remember the 24-hour cycle).
- Push the crown back into position I.



# WATER RESISTANT

\* Your Tibaldi Watch is a water-resistant Watch.  
Check the Marking on the back of the watch, find below  
the relevant usage recommendation.

\* Water Resistant 3ATM or 30 METERS (100 Feet)  
Shall withstand splashes of water while washing the  
hand. But should not be worn while swimming or  
diving.

\* Water Resistant 5ATM or 50 METERS (165 Feet)  
Suitable for showering or swimming in shallow water.

\* Water Resistant 10ATM or 100 METERS (330 Feet)  
Suitable for swimming, snorkeling, but should not be  
worn while scuba diving.



# GENERAL CARE FOR A WATER RESISTANT WATCH

DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET  
OR IN WATER

DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA  
EXTREME HEAT CAN DAMAGE THE WATCH

AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD,  
RINSE THE WATCH IN A STREAM OF FRESH WATER AND DRY IT  
WITH SOFT COLTH.

EATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT  
EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE  
STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE  
STRAP.







**TIBALDI**

1916



[www.tibaldi.com](http://www.tibaldi.com)

